

CP 200 Instructions

Screw Antenna on to radio

To turn on: Turn the **Volume Knob** clock-wise

To turn off: Turn the **Volume Knob** counter clock-wise

Using the Radio: Simply turn the **Channel Selection Knob** to select the desired channel. Push and Hold the **PTT Button** on the side of the radio, speak into the microphone. To listen, release the **PTT Button** for a response.

Using Head Sets/Speaker Mics/Surveillance Kits

Shut off radio, then insert plug straight and firmly into the **Audio Jack**, turn the radio back on. Keep volume at a safe level to prevent hearing/ear damage.

Note: if you experience a problem accessory or keyed up radio, shut it off, disconnect and repeat this procedure.

Charging the radio

Place the radio into the supplied rapid charging unit. Red LED light indicates unit is charging. Green indicates unit is fully charged.


Charging Spare Batteries

Place the battery into the edge of the charger cup (note the electrical contacts). Red indicates charging. Green indicates charged.


Changing Spare Batteries

Locate the battery latch on the bottom of the radio, push towards the front of the radio and slide the battery down and remove. Place charged battery on the back of the radio approx. 1/2 inch from the top and slide up to lock into place.

Note: At least 2-Radios must be **Turned On** and on the **Same Channel** to be able to talk to each other. When your battery is low on power the unit will chirp a low sounding tone, telling you it's time to change or charge the battery.

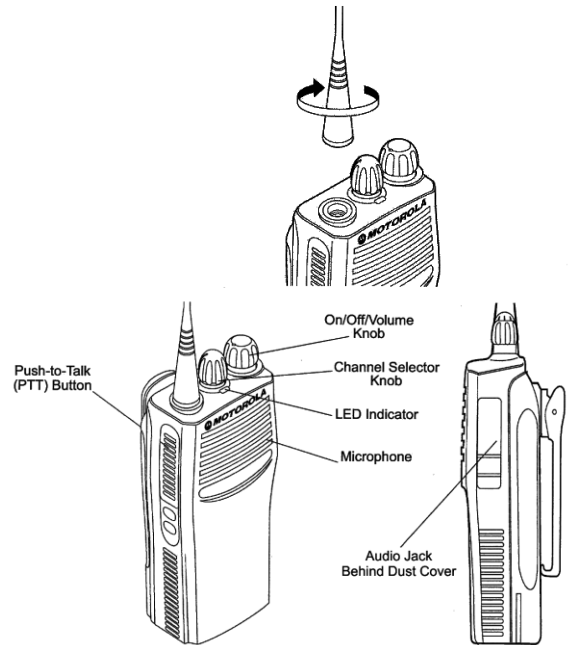

Removing the Battery

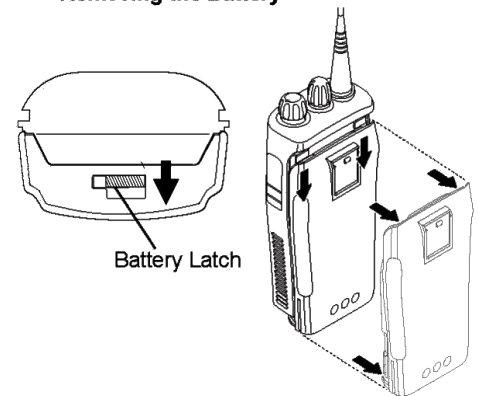

Attaching the Battery

