

EX 500 Instructions

Screw Antenna on to radio

To turn on: Turn the **Volume Knob** clock-wise

 
To turn off: Turn the **Volume Knob** counter clock-wise



Using the Radio: Simply turn the **Channel Selection Knob** to select the desired channel. Push and Hold the **PTT Button** on the side of the radio, speak into the microphone. To listen, release the **PTT Button** for a response.

Using Head Sets/Speaker Mics/Surveillance Kits

Shut off radio. Take accessory **Connector** with cord up and insert connection tab into the slot. Push **Connector** against radio and screw thumbscrew fitting into radio snugly. Turn the radio back on. Note: if you experience a problem accessory or keyed up radio, shut it off, disconnect and repeat this procedure.

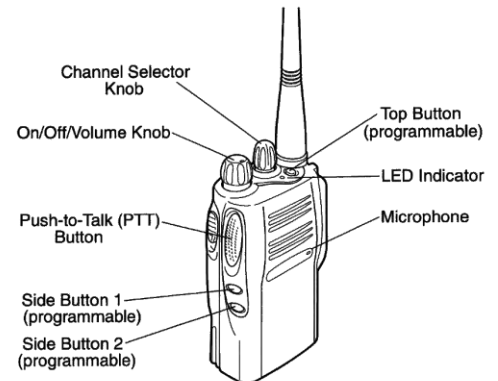

Charging the radio

Place the radio into the supplied rapid charging unit. Red LED light indicates unit is charging. Green indicates unit is fully charged.

 
Charging Spare Batteries

Place the battery into the edge of the charger cup (note the electrical contacts). Red indicates charging. Green indicates charged.


Changing Spare Batteries

Locate the battery latches on the top-side of the battery. Push both down at the same time and pull back the battery and remove. Place charged battery on the lower back of the radio. (There are 3-slots that the battery fits into) Insert the battery and push against the back of the radio. You will hear it snap and lock itself into place.


ATTACHING ACCESSORIES

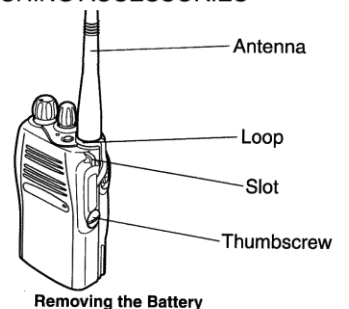

Removing the Battery

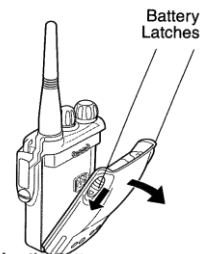 

Attaching the Battery

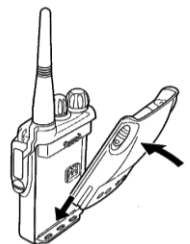 

Note: At least 2-Radios must be **Turned On** and on the **Same Channel** to be able to talk to each other. When your battery is low on power the unit will chirp a low sounding tone, telling you it's time to change or charge the battery.